




LED		
<p>PWR</p> <p>Green: External power Red: Internal battery</p>	<p>STATUS</p> <p>Green: signal OK Red: Searching signal</p>	<p>EVENT</p> <p>Light flash during message or call reception</p>



SEND A TEXT MESSAGE

- 1  + « OK » to enter in the messages list
- 2 Select your message using the arrows
- 3 Push twice on « OK » to send
 - Yes / No
 - Need water
 - Emergency, need medical help
 - Many injured
 - Mechanical issue / Out of gas
 - Lost, ...

USER GUIDE IRITRACK



Buttons must be pushed until the LED « STATUS » flashes and the sending indication on the screen (1 second).

After pushing **RED button** the LED « STATUS » stays lighted in blue. Then it flashes during 1 minute, confirming that the HQ is receiving your alarm

CALL HQ

Can take few minutes to establish the connexion.

MECHANICAL ISSUE

You or another vehicle
Push the green button when leaving, your stop time may be deducted.

NEED MEDICAL ASSISTANCE

You or another person
Victim or witness of a body injury.