




LED		
PWR	STATUS	EVENT
Green: External power Red: Internal battery	Green: signal OK Red: Searching signal	Light flash during message or call reception



## SEND A TEXT MESSAGE


- 1  + « OK » to enter in the messages list
- 2 Select your message using the arrows
- 3 Push twice on « OK » to send
  - Yes / No
  - Need water
  - Emergency, need medical help
  - Many injured
  - Mechanical issue / Out of gas
  - Lost, ...



LED		
PWR	STATUS	EVENT
Green: External power Red: Internal battery	Green: signal OK Red: Searching signal	Light flash during message or call reception



## SEND A TEXT MESSAGE

- 1  + « OK » to enter in the messages list
- 2 Select your message using the arrows
- 3 Push twice on « OK » to send
  - Yes / No
  - Need water
  - Emergency, need medical help
  - Many injured
  - Mechanical issue / Out of gas
  - Lost, ...



Buttons must be pushed (3 seconds) until the LED « STATUS » flashes and sending indication pops on the screen.

After pushing **RED button** the LED « STATUS » stays lighted in blue.

Then it flashes during 1 minute, confirming that the HQ is receiving your alarm

## CALL HQ

Can take few minutes to establish the connexion.

## MECHANICAL ISSUE

**You or another vehicle** Push the green button when leaving, your stop time may be deducted.

## NEED MEDICAL ASSISTANCE

**You or another person**  
*Victim or witness of a body injury.*



Buttons must be pushed (3 seconds) until the LED « STATUS » flashes and sending indication pops on the screen.

After pushing **RED button** the LED « STATUS » stays lighted in blue.

Then it flashes during 1 minute, confirming that the HQ is receiving your alarm

## CALL HQ

Can take few minutes to establish the connexion.

## MECHANICAL ISSUE

**You or another vehicle** Push the green button when leaving, your stop time may be deducted.

## NEED MEDICAL ASSISTANCE

**You or another person**  
*Victim or witness of a body injury.*